

 













 
 

 
 
 
 
 

 



 
 



 
 

 
 
 

 



 
 

 
 
 

 
 



 

 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Auto	 Media
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 LCD Menu	 Menu
 9	 9	 DVB Menu	 D. Menu
 0	 0	 Input	 AV
 -/--	 Shift + Guide	 P.Mode	 Format
 Recall	 Back	 S.Mode	 Shift + Options
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 Info	 Info
 Nicam	 Smart	 FAV	 Pre Ch

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DUAL	 SUBT
 DVD	 DVD	 SAT	 OPT
 SAT	 SAT	 AUX	 AUX
 AUX	 AUX	 PLAY MODE	 REC MODE
 PLAY MODE	 PLAY MODE	 Play	 Play
 Play	 Play	 Pause	 Pause
 Pause	 Pause	 Stop	 Stop
 Stop	 Stop	 FF	 FF
 FF	 FF	 FR	 FR
 FR	 FR	 Still	 Still
 Still	 Still	 DISC NAV	 SOUND
 DISC NAV	 DISC NAV	 AD	 SETTINGS
 AD	 AD	 LIST	 DUAL
 LIST	 LIST	 SUBT	 OPT
 SUBT	 SUBT	 PROG	 SEARCH
 PROG	 PROG	 PICTURE	 ECO
 PICTURE	 PICTURE	 SLEEP	 TV/R
 SLEEP	 SLEEP	 FORMAT	 3D
 FORMAT	 FORMAT	 E-MANUAL	 REPEAT
 E-MANUAL	 E-MANUAL	 ZOOM	 TIMER
 ZOOM	 ZOOM	 D.MENU	 TEXT
 D.MENU	 D.MENU	 UP	 AV
 UP	 UP	 TOP MENU	 DISPLAY
 TOP MENU	 TOP MENU	 MENU	 INFO
 MENU	 MENU	 OK	 OK
 OK	 OK	 LEFT	 LEFT
 LEFT	 LEFT	 RIGHT	 RIGHT
 RIGHT	 RIGHT	 DOWN	 DOWN
 DOWN	 DOWN	 EXIT	 BACK
 EXIT	 EXIT	 HOME	 HOME
 HOME	 HOME	 SMART	 SMART
 SMART	 SMART	 APP	 CH-
 APP	 APP	 MEDIA	 CH-
 MEDIA	 MEDIA	 VOL+	 VOL+
 VOL+	 VOL+	 VOL-	 VOL-
 VOL-	 VOL-	 1	 2
 1	 1	 2	 3
 2	 2	 3	 4
 3	 3	 4	 5
 4	 4	 5	 6
 5	 5	 6	 7
 6	 6	 7	 8
 7	 7	 8	 9
 8	 8	 9	 0
 9	 9	 0	 FAV
 0	 0	 FAV	 PRE-CH
 FAV	 FAV	 PRE-CH	 PRE-CH
 PRE-CH	 PRE-CH	 A	 B
 A	 A	 C	 D
 B	 B	 D	 D
 D	 D	 Mandis SHOP	 Mandis SHOP
 Mandis SHOP	 Mandis SHOP	 www.mandis.tv	 www.mandis.tv



