



 



 



 



 





 





 



 

 

 
 






 
 
 

 
 
 







 



 









| Original   | Replacement   | Original   | Replacement  |
|--|---|--|--|
|  Power      |  Power                         |  OSD      |  Display / Media          |
|  USB/Card   |  Smart / List                  |  Up       |  Up                       |
|  Reset      |  Fav / Marker / PC             |  Left     |  Left                     |
|  Open/Close |  Eject / Surround              |  Enter    |  OK                       |
|  Language   |  Audio / Lang I/II             |  Right    |  Right                    |
|  Angle      |  Info / Angle                  |  Title    |  Sound / Title            |
|  Subtitle   |  Subtitle / EQ                 |  Down     |  Down                     |
|  Vol+       |  Vol+                          |  R/L      |  AV / Input / RDS         |
|  Return     |  Back / Return                 |  Play     |  Play / Slow              |
|  Repeat    |  Green / APP / Repeat         |  Pause   |  Pause / Step / Freeze   |
|  A-B      |  Yellow / YouTube / Repeat   |  <<     |  << / Tune-             |
|  Vol-     |  Vol-                        |  I<<    |  I<< / Preset-          |
|  Step     |  Shift + Pause / Step /      |  N/P    |  Red / Netflix / Search |
|  Slow     |  Shift + Play /              |  Stop   |  Stop / Hold            |
|  PBC      |  Blue / Prime Video / Random |  >>     |  >> / Tune+             |
|  Mute     |  Mute / Dimmer               |  >>I    |  >>I / Preset+          |
|  Setup    |  Setup / OPT /               |  V-Mode |  Picture / Format       |





|   | Original | Replacement   | Original | Replacement |
|---|----------|---|----------|-------------|
|    | 1        |  1                       |          |             |
|    | 2        |  2                       |          |             |
|    | 3        |  3                       |          |             |
|    | 4        |  4                       |          |             |
|    | 5        |  5                       |          |             |
|    | 6        |  6                       |          |             |
|    | 7        |  7                       |          |             |
|    | 8        |  8                       |          |             |
|    | 9        |  9                       |          |             |
|    | 10       |  0                       |          |             |
|   | 10+      |  Guide / EPG / -/--     |          |             |
|  | Goto     |  Text / Goto           |          |             |
|  | Prog     |  TV/Radio /            |          |             |
|  | Clear    |  Exit / Cancel / Clear |          |             |
|  | Zoom     |  Zoom / Size           |          |             |
|  | Menu     |  Menu / Home           |          |             |

