

 
 

 










Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *(Left)	 Shift + Left
 0	 0
 *(Right)	 Shift + Right
 [ ]/Picture	 Picture / Format
 /Sound	 Sound / Title
 I-II	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Up/PR+	 Up
 PR+	 CH+ / Page+
 List	 Smart / List
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Sleep	 Sleep / Timer
 Down/PR-	 Down
 PR-	 CH- / Page-
 P<P	 Back / Return
 Tv/AV	 AV / Input / RDS
 Tv/PC	 TV/Radio /
 [ <> ]/ARC	 Shift + Picture / Format
 Red	 Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 [≡]/Text / GOTO
	 [.≡]/Mix / SHIFT + GOTO / Text /
	 [≡◆]/Size / ZOOM / Size
	 [≡i]/Index / ANGLE / Info / Angle
	 [≡x]/Update / REC MODE / Rec / Rec Mode
	 [≡o]/Time / STEP-FREEZE / Pause / Step / Freeze
	 [≡?]/Reveal / SLOW / Play / Slow
	 [≡+]/Hold / HOLD / Stop / Hold
	 [■]/PIP / MEDIA DISPLAY / Display / Media
	 [:■]/Input / SHIFT + RDS / AV INPUT / RDS /
	 [/■]/Swap / SHIFT + RETURN / BACK / Back / Return
	 PIP PR+ / SHIFT + CH PAGE / Shift + CH+ /
	 [-■]/Position / SHIFT + MEDIA DISPLAY / Shift + Display / Media
	 [≡.]/Mode / SHIFT + LIST SMART / Shift + Smart / List

Original	Replacement
	 *(Down) / SHIFT + DOWN / Shift + Down
	 PIP PR- / SHIFT + CH PAGE / Shift + CH- /

