

 


 











 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Green / Sleep	 Green
 Mute	 Mute	 Green / Sleep	 Sleep
 1	 1	 Yellow / Q.View	 Yellow
 2	 2	 Blue / List	 Blue
 3	 3	 Blue / List	 List
 4	 4	 Up / PR+	 Up
 5	 5	 Up / PR+	 Ch +
 6	 6	 Down / PR-	 Down
 7	 7	 Down / PR-	 Ch -
 8	 8	 Right / Vol+	 Right
 9	 9	 Right / Vol+	 Vol +
 0	 0	 Left / Vol-	 Left
 Menu	 Menu	 OK	 Ok
 TV / AV	 AV	 PSM	 Format
 Red / I/II	 Red	 SSM	 Shift + Dual
 Red / I/II	 Dual	 PC/*	 Smart
 Left / Vol-	 Vol -	 ARC/*	 Media

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DUAL	 DUAL
 DVD	 DVD	 SAT	 SAT
 AUX	 AUX	 REC MODE	 REC MODE
 PLAY MODE	 PLAY MODE	 STOP	 STOP
 PAUSE	 PAUSE	 EJECT	 EJECT
 SKIP BACK	 SKIP BACK	 SKIP FORWARD	 SKIP FORWARD
 SKIP FORWARD	 SKIP FORWARD	 DISC NAV	 DISC NAV
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 LIST	 LIST	 SETTINGS	 SETTINGS
 LIST	 LIST	 OPT	 OPT
 LIST	 LIST	 ECO	 ECO
 LIST	 LIST	 3D	 3D
 LIST	 LIST	 TIMER	 TIMER
 LIST	 LIST	 AV	 AV
 LIST	 LIST	 D.MENU	 D.MENU
 LIST	 LIST	 TEXT	 TEXT
 LIST	 LIST	 UP	 UP
 LIST	 LIST	 DOWN	 DOWN
 LIST	 LIST	 OK	 OK
 LIST	 LIST	 CH +	 CH +
 LIST	 LIST	 CH -	 CH -
 LIST	 LIST	 RIGHT	 RIGHT
 LIST	 LIST	 VOL +	 VOL +
 LIST	 LIST	 VOL -	 VOL -
 LIST	 LIST	 HOME	 HOME
 LIST	 LIST	 SMART	 SMART
 LIST	 LIST	 APP	 APP
 LIST	 LIST	 MEDIA	 MEDIA
 LIST	 LIST	 1	 1
 LIST	 LIST	 2	 2
 LIST	 LIST	 3	 3
 LIST	 LIST	 4	 4
 LIST	 LIST	 5	 5
 LIST	 LIST	 6	 6
 LIST	 LIST	 7	 7
 LIST	 LIST	 8	 8
 LIST	 LIST	 9	 9
 LIST	 LIST	 0	 0
 LIST	 LIST	 GUIDE	 GUIDE
 LIST	 LIST	 PRE-CH	 PRE-CH
 LIST	 LIST	 A	 A
 LIST	 LIST	 B	 B
 LIST	 LIST	 C	 C
 LIST	 LIST	 D	 D



