






Original	Replacement	Original	Replacement
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Time Shift	 D.Menu / Top	 Up	 Up
 7	 7	 CH+ / Page+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 OK	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH- / Page-	 CH- / Page-





Original	Replacement	Original	Replacement
 Down	 Down		
 Filelist	 Smart / List		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Red/FAV/Daily	 Red / Netflix / Search		
 Green/DEL/Weekl	 Green / APP / Repeat		
 Yellow/Movie/P.Inf	 Yellow / YouTube / Repeat		
 Blue/Look/Timer	 Blue / Prime Video / Random		

