



Original		Replacement		Original		Replacement	
	Power		Power		Info		Info / Angle
	Mute		Mute / Dimmer		EPG		Guide / EPG / -/-
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Menu		Menu / Home
	7		7		Exit		Exit / Cancel / Clear
	8		8		Vol +		Vol+
	9		9		Vol -		Vol-
	0		0		P +		Shift + CH+ /
	TV / R		TV/Radio /		List		Smart / List
	Home		D.Menu / Top		P -		Shift + CH- /
	FAV		Fav / Marker / PC		CH +		CH+ / Page+
	Back		Back / Return		USB		Shift + 8
	Audio		Audio / Lang I/II		Text		Text / Goto





	Original	Replacement	Original	Replacement
	CH -	 CH- / Page-		
	SUB	 Subtitle / EQ		
	Aspect	 Picture / Format		
	Pause	 Pause / Step / Freeze		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Play	 Play / Slow		
	I<<	 I<< / Preset-		
	I>>	 I>> / Preset+		
	Stop	 Stop / Hold		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

