






 
 
 






 



 








 

 











 









 
 



 
 


 


 
 



 
 




 





Original		Replacement		Original		Replacement	
	Power		Power		Green		Green
	1		1		Yellow/FAV+		Yellow
	2		2		Blue		Blue
	3		3		White/FAV-		Media
	4		4		Pause		Pause
	5		5		Mute		Mute
	6		6		Menu		Menu
	7		7		Exit		Exit
	8		8		CH+		Ch +
	9		9		CH-		Ch -
	0/Multipict		0		Up		Up
	Info		Info		Down		Down
	UHF		AV		Right/↓		Right
	Audio L/R		Dual		Left/↑		Left
	Text		Text		OK		Ok
	Sat/Tv		Subt		Vol+		Vol +
	Red		Red		Vol-		Vol -





Original	Replacement	Original	Replacement
 Tv/Radio	 TV/R		
 FAV	 Pre Ch		
 SAT	 Options		
 EPG	 Guide		
 Recall	 Back		

