



| Original | Replacement |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Quality/P- |  CH- / Page- |
|  0 |  0 |
|  Recall/P+ |  CH+ / Page+ |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Up |  Up |

| Original | Replacement |
|--|---|
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Sel |  Smart / List |
|  Down |  Down |
|  FAV |  Fav / Marker / PC |
|  Audio |  Audio / Lang I/II |
|  Pause |  Pause / Step / Freeze |
|  Red/Subtitle |  Red / Netflix / Search |
|  AV |  AV / Input / RDS |
|  TV/R |  TV/Radio / |
|  Blue/Info |  Blue / Prime Video / Random |
|  Green/PIP |  Green / APP / Repeat |
|  Yellow/EPG |  Yellow / YouTube / Repeat |

