
 




 






 
 

 
 
 

 





 







 



 
 




Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Red/Sound	 Red	 6	 6
 Green/Picture	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 REPEAT TEXT Text	 0	 0
 [=O]	 SETTINGS OPT Options	 P<P	 FAV PRE-CH Pre Ch
 [=+]	 PICTURE FORMAT Format	 -/--	 -/-- GUIDE Guide
 [=X]	 HOME SMART Smart	 Vol+	 + VOL Vol +
 [.=]/[■]	 AD SUBT Subt	 Vol-	 VOL - Vol -
 [=◆]/[■]	 APP MEDIA Media	 Mute	 MUTE Mute
 [=?]/↓	 ECO 3D 3D	 P+	 + CH Ch +
 [=i]/↑	 DISC NAV LIST List	 P-	 CH - Ch -
 1	 1	 I-II	 SOUND DUAL Dual
 2	 2	 [i]	 DISPLAY INFO Info
 3	 3	 TV	 SEARCH TV/R TV/R
 4	 4	 AV	 TIMER AV AV





Original		Replacement		Original		Replacement	
	PP		Back				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	M		Menu				

