
 
 
 
 


 
 
 
 





 
 
 
 
 
 
 
 
 
 
 


 
 


 
 
 
 
 
 


 
 


 
 


 
 
 
 


 
 




Original	Replacement
 Power	 Power
 Source Search	 Source
 Enter	 Enter
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 ESC	 Shift + Menu
 Vol+	 Page  Vol
 Vol-	 Page  Vol
 Help	 Info
 Freeze	 Timer Freeze
 A/V Mute	 Mute Blank
 Auto	 Auto
 User	 Shift +  Mode
 Aspect	 Eco  Aspect

Original	Replacement
 E-Zoom+	 Play  + / Play
 Pointer	 Shift +  Auto
 E-Zoom-	 Stop  - / Stop
 Color Mode	 Mode
 Page Up	 Shift +  Up
 Page Down	 Shift +  Down
 USB	 Focus  Volt / Focus
 Computer	 Video  Comp / Video
 Video	 Shift +  Video Comp
 LAN	 Invert  3D / Invert
 1	 Shift +  Page  Vol
 2	 Shift +  Play  + / Play
 3	 Shift +  Focus  Volt / Focus
 4	 Shift +  Page  Vol
 5	 Shift +  Stop  - / Stop
 6	 Shift +  Info  Help /
 7	 Shift +  Eco  Aspect



