 

 
 
 
 
 

 
 
 

 

 



 

 
 




 

 
 
 







Original	Replacement
 Power	 Power
 Source Search	 Source
 Computer	 Comp / Video
 Video	 Shift + Mute / Blank / Mute
 USB	 Mode
 Lan	 Shift + Left
 Screen Fit 1	 Shift + Enter
 Screen Fit 1	 Shift + Mode
 2	 Shift + Play / + / Play
 2D/3D 3	 Shift + Down
 2D/3D 3	 Volt / Focus
 4	 Shift + Auto
 5	 Shift + - / Stop
 6	 Shift + Help / Info
 Auto 7	 Eco / Aspect
 Auto 7	 Auto
 Aspect 3	 Shift + Menu

Original	Replacement
 8	 3D / Invert
 Color Mode 9	 Shift + Source
 Color Mode 9	 Shift + 3D /
 0	 Shift + Comp / Video
 Menu	 Menu
 Esc	 Shift + Power
 User	 Shift + Up
 Pointer	 Shift + Right
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 Enter
 Page+	 Shift + Vol + / Page +
 Page-	 Shift + Vol - / Page -
 E-Zoom+	 + / Play
 E-Zoom-	 - / Stop





Original		Replacement	
Volume	Vol+	Page▲	Vol + / Page +
		Vol	
	Vol-	Page▼	Vol - / Page -
		Vol	
A/V Mute	AV Mute	Mute	Blank / Mute
		Blank	
Freeze	Freeze	Timer	Freeze / Timer
		Freeze	
Help	?/Help	Info	Help / Info
		Help	

Original		Replacement	

