

 



 



 

 



 







 






 





 

 











 

 


 


Original	Replacement
 Power	 Power
 Setup	 Setup / OPT /
 Digest	 Smart / List
 Lang	 Shift + Audio / Lang I/II
 Display	 Display / Media
 1	 1
 2	 2
 3	 3
 Zoom	 Zoom / Size
 4	 4
 5	 5
 6	 6
 A-B Repeat	 Yellow / YouTube / Repeat
 7	 7
 8	 8
 9	 9
 1/All Repeat	 Green / APP / Repeat

Original	Replacement
 0	 0
 +10	 Guide / EPG / -/-
 Clear	 Exit / Cancel / Clear
 Play	 Play / Slow
 Up	 Up
 Stop	 Stop / Hold
 Left	 Left
 Select	 OK
 Right	 Right
 Pause/Step	 Pause / Step / Freeze
 Down	 Down
 Slow	 Shift + Play /
 F.BWD	 << / Tune-
 F.FWD	 >> / Tune+
 Prev.	 I<< / Preset-
 Next	 >>I / Preset+
 Subtitle	 Subtitle / EQ





	Original	Replacement		Original	Replacement
	Angle	 Info / Angle			
	Audio	 Audio / Lang I/II			
	Volume+	 Vol+			
	Program	 Shift + TV/Radio / Program			
	Menu/PBC	 Menu / Home			
	Title/Ret.	 Sound / Title			
	Volume-	 Vol-			
	Search	 Red / Netflix / Search			
	Tv Sys	 TV/Radio /			
	Tv Mode	 Fav / Marker / PC			
	Mute	 Mute / Dimmer			

	Original	Replacement

