





Original	Replacement
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Replacement
	Mute / Dimmer
	Left
	Up
	Right
OK	OK
	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red	Red / Netflix / Search
Red	Sound / Title
Green	Green / APP / Repeat
Green	Picture / Format
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto





Original	Replacement
 [≡o]	 Sleep / Timer
 Hold	 Stop / Hold
 [≡X]	 Exit / Cancel / Clear
 Mix / PIP Swap	 Smart / List
 PIP / Size	 Zoom / Size
 PIP Down / [≡?]	 I<< / Preset-
 PIP Up / Index	 >>I / Preset+
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS

Original	Replacement

