










 





 

 

 

 

 

 
 
 

 






 


 

 

 

 







 











 




Original	Replacement	Original	Replacement
	Power		Power
	Select		Menu
	:≡		Smart
	Tv		TV/R
	Red/B		Red
	Green/A		Green
	Blue/X		Blue
	Yellow/Y		Yellow
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	←		Guide
	Info/Guide		Info
	Message		Subt
	?/Options		Options
	[ ]/↔		Dual
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Mute		Mute
	Left		Left
	OK		Ok





Original		Replacement		Original		Replacement	
	Free		Media				
	Rec		Rec				
	<<		<<				
	Play/Pause		Play				
	Stop		Stop				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Start		AV				
	Up(Games)		Shift + Up				
	Down(Games)		Shift + Down				
	Right(Games)		Shift + Right				
	Left(Games)		Shift + Left				

