





 




























 







 



 



 



 



 














 

 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Menu	 Menu / Home
 Info	 Info / Angle
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV+	 Shift + CH+ /
 FAV-	 Shift + CH- /
 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Aspect	 D.Menu / Top





Original	Replacement
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Tv/R	 TV/Radio /
 Freeze	 Pause / Step / Freeze
 Sub-T	 Subtitle / EQ
 PVR-List	 Smart / List
 TSR	 Shift + TV/Radio / Program
 TTX	 Text / Goto
 Hold	 Shift + Stop /
 Reveal	 Display / Media
 Sub-P	 Shift + Subtitle / EQ
 Index	 Shift + Info / Angle
 Zoom	 Zoom / Size
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+

Original	Replacement
 I<<<	 I<<< / Preset-
 I>>>	 I>>> / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

