



Original	Replacement	Original	Replacement
 Standby	 Power	 Right	 Right
 Rec PVR	 Rec	 Vol+	 Vol +
 List PVR	 Smart	 Favourite	 Pre Ch
 Mute	 Mute	 CH-	 Ch -
 EPG	 Guide	 Down	 Down
 Info	 Info	 Tv/Radio	 TV/R
 TTX	 Text	 1	 1
 Audio	 Dual	 2	 2
 DTV/VCR	 Media	 3	 3
 Subtitle	 Subt	 Recall	 Back
 Menu	 Menu	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit	 Goto	 Options
 Left	 Left	 7	 7
 Vol-	 Vol -	 8	 8
 OK	 Ok	 9	 9





 
 
 

 



 

 
 


 


 
 



 

 


 








 
 


 



 



 

 



 




 
 







Original	Replacement	Original	Replacement
	0		
	<<		
	>>		
	<<		
	>>		
	Play		
	Pause		
	Stop		
	+ Shift + Text		
	Red		
	Green		
	Yellow		
	Blue		







 






 



 






 
 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 Down	 Down
 Rec PVR	 Rec	 Right	 Right
 List PVR	 Smart	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Media	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Favourite	 Pre Ch	 7	 7
 Tv/Radio	 TV/R	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Replacement	Original	Replacement
 Goto	 AV		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Repeat	 SHIFT +  REPEAT TEXT Shift + Text		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		

