


 
 







 


 

 

 

 

 

 

 

 

 



 

 
 








 

 

 

 

 

 

 

 

 

 






Original	Replacement	Original	Replacement
	Power		Power
	Still		Pause
	Wide		Format
	TV		TV/R
	Video		AV
	RGB		Eject
	Teletext		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio In		Shift + Dual
	CH Return		Pre Ch
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Mute		Mute
	Dual/Stereo		Dual
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow





Original		Replacement		Original		Replacement	
	Blue		Blue				
	Subpage		Subt				
	Reveal		Options				
	Size		3D				
	Hold		Smart				
	Index		Guide				
	Mode		Back				
	Cancel		Exit				
	Store		Rec				
	Display		Info				
	Picture Mode		>>				
	Picture Memory		>>				
	Off-Timer		Sleep				

