













 





























Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 A1	 Shift + Smart / List	 Tv/Radio	 TV/Radio /
 V-Format	 Picture / Format	 0/Zoom	 0
 Timer	 Sleep / Timer	 0/Zoom	 Zoom / Size
 Mute	 Mute / Dimmer	 Recall	 Back / Return
 Tms	 AV / Input / RDS	 Find	 Shift + Red / Netflix /
 B2	 Shift + Display / Media	 Vol-	 Vol-
 F1	 Shift + 1	 Page-	 CH- / Page-
 Tv/Sat	 Smart / List	 SAT	 Display / Media
 1	 1	 Rec	 Rec / Rec Mode
 2	 2	 Vol+	 Vol+
 3	 3	 Page+	 CH+ / Page+
 4	 4	 FAV	 Fav / Marker / PC
 5	 5	 Menu	 Menu / Home
 6	 6	 Up	 Up
 7	 7	 Info	 Info / Angle
 8	 8	 Left	 Left





Original	Replacement	Original	Replacement
	OK		Play Mode
	Right		USB
	Exit		Red
	Down		Audio
	EPG		Green
	Folder		Option
	Stop		TXT
	Pause		Yellow
	Play		Blue
	I<<		
	>>I		
	<</Page-		
	<</Page-		
	>>/Page+		
	>>/Page+		
	<I		
	I>		
	OK		Sound / Title
	Right		Shift + 8
	Exit / Cancel / Clear		Red / Netflix / Search
	Down		Audio / Lang I/II
	Guide / EPG / -/--		Green / APP / Repeat
	Eject / Surround		Setup / OPT /
	Stop / Hold		Text / Goto
	Pause / Step / Freeze		Yellow / YouTube / Repeat
	Play / Slow		Blue / Prime Video / Random

