

 

 

 









 

 
 

 











 



























 







Original	Replacement
 Function	 Smart / List
 Power	 Power
 Open/Close	 Eject / Surround
 Sleep	 Sleep / Timer
 Title	 Sound / Title
 Display	 Display / Media
 Menu	 Menu / Home
 Setup	 Setup / OPT /
 Preset Up	 Shift + >> / Preset+
 Preset Up	 Up
 Left/Tun-	 Left
 Left/Tun-	 Shift + << /
 Enter	 OK
 Right/Tun+	 Right
 Right/Tun+	 Shift + >> /
 Preset Down	 Shift + I<< / Preset-
 Preset Down	 Down

Original	Replacement
 Return	 Back / Return
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Play / Mo/St.	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 I<< Skip	 I<< / Preset-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 Skip >>I	 >>I / Preset+
 Audio/Tv->HT SPK	 Audio / Lang I/II
 Vol+	 Vol+
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 ♪/Special EQ	 Shift + Subtitle / EQ
 1	 1
 2	 2





Original	Replacement
3	3
Random/Repeat	Green / APP / Repeat
Random/Repeat	Blue / Prime Video / Random
4	4
5	5
6	6
[...] / Subtitle	Subtitle / EQ
7	7
8	8
9	9
0	0
Power Tv	Shift + Power
PR/CH+ Tv	Shift + CH+ /
Vol+ TV	Shift + Vol+
Prog.Memo	TV/Radio /
Input Tv	Shift + AV / Input / RDS
PR/CH- Tv	Shift + CH- /

Original	Replacement
Vol- Tv	Shift + Vol-
Clear	Exit / Cancel / Clear
RDS	AV / Input / RDS
PTY/Resolution	Picture / Format

