






 
 
 
 
 





 




















Original	Replacement
 TV	 TV/Radio /
 Power	 Power
 Input	 AV / Input / RDS
 PIP	 D.Menu / Top
 Zoom -	 I<< / Preset-
 Zoom +	 >>I / Preset+
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 SSM	 Sound / Title
 PSM	 Picture / Format
 I/II	 Audio / Lang I/II
 Menu	 Menu / Home
 ARC	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Up	 Up
 Right	 Right

Original	Replacement
 OK	 OK
 Down	 Down
 Red / PIP PR -	 Red / Netflix / Search
 Red / PIP PR -	 Shift + CH- /
 Green / PIP PR +	 Green / APP / Repeat
 Green / PIP PR +	 Shift + CH+ /
 Yellow / Swap	 Yellow / YouTube / Repeat
 Yellow / Swap	 Back / Return
 Blue / PIP Input	 Shift + AV / Input / RDS
 Blue / PIP Input	 Blue / Prime Video / Random
 Vol +	 Vol+
 PR +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 List	 Smart / List
 PR -	 CH- / Page-
 1	 1



















 

Original		Replacement	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Favourite		Fav / Marker / PC
	0		0
	Q.View		Display / Media
	Size		Zoom / Size
	Position		Play / Slow
	Index		Pause / Step / Freeze
	Hold		Stop / Hold
	Time	+	Shift + Sleep / Timer
	Reveal		Rec / Rec Mode

Original		Replacement	
	Mix	+	Shift + Text /
	Mode		Setup / OPT /















 



 

 























Original	Replacement
 Power DVD	 Power
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 >>	 >> / Preset+
 <<	 << / Preset-
 Power Audio	 Shift + Power
 Vol+ Audio	 Vol+
 Vol- Audio	 Vol-
 Mute Audio	 Mute / Dimmer












 


 














 



 


 

Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+





Original	Replacement
 Power STB	 Power
 Input STB	 AV / Input / RDS
 Menu STB	 Menu / Home
 Up STB	 Up
 OK STB	 OK
 Down STB	 Down
 Right STB	 Right
 Left STB	 Left
 Vol+ STB	 Vol+
 Vol- STB	 Vol-
 Mute STB	 Mute / Dimmer
 PR+ STB	 CH+ / Page+
 PR- STB	 CH- / Page-
 1 STB	 1
 2 STB	 2
 3 STB	 3
 4 STB	 4

Original	Replacement
 5 STB	 5
 6 STB	 6
 7 STB	 7
 8 STB	 8
 9 STB	 9
 0 STB	 0
 Power Cable	 Shift + Power
 Menu Cable	 Shift + Menu /
 Up Cable	 Shift + Up
 OK Cable	 Shift + OK
 Down Cable	 Shift + Down
 PR+ Cable	 Shift + CH+ /
 PR- Cable	 Shift + CH- /
 Vol+ Cable	 Shift + Vol+
 Vol- Cable	 Shift + Vol-
 Mute Cable	 Shift + Mute / Dimmer
 1 Cable	 Shift + 1





	Original		Replacement	
	2 Cable		+	Shift + 2
	3 Cable		+	Shift + 3
	4 Cable		+	Shift + 4
	5 Cable		+	Shift + 5
	6 Cable		+	Shift + 6
	7 Cable		+	Shift + 7
	8 Cable		+	Shift + 8
	9 Cable		+	Shift + 9
	0 Cable		+	Shift + 0

	Original		Replacement

