




 



































 



 



 

 

 

 







 








Original		Replacement		Original		Replacement	
	Power		Power		Home		Smart
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Source		AV
	4		4		Exit		Exit
	5		5		Display		Info
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		Ok
	List		List		P.Mode		Shift + Format
	Recall		Back		S.Mode		Dual
	Vol+		Vol +		Sleep		Sleep
	Vol-		Vol -		MTS		Options
	Aspect		3D		Rec		Rec





Original		Replacement		Original		Replacement	
	Guide		Guide		Size/Mouse		Format
	Red		Red		Hold/Refresh		D. Menu
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<</Index		<<				
	Play		Play				
	Pause/Cancel		Pause				
	>>		>>				
	I<</Sub.PG		I<<				
	>>I/Reveal		>>I				
	Stop/Mix		Stop				
	TTX		Text				
	CAP		Media				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	FAV		Pre Ch				

