
 




 





Original	Replacement	Original	Replacement
	Power		CEC
	1		Smart / List
	2		D.Menu / Top
	3		Exit / Cancel / Clear
	4		Menu / Home
	5		Up
	6		Back / Return
	7		Left
	8		OK
	9		Right
	FAV		Down
	0		Guide
	Red / Netflix / Search		Tools
	Green / APP / Repeat		Vol+
	Yellow / YouTube / Repeat		Source
	Blue / Prime Video / Random		CH+ / Page+
			Vol-
			Mute / Dimmer





Original	Replacement	Original	Replacement
 PR-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 [<>]	 Picture / Format		
 Dialog	 Audio / Lang I/II		
 [...]	 Subtitle / EQ		
 Tv/Radio	 TV/Radio /		
 My Media	 Display / Media		

