







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ? / Audio	 Audio / Lang I/II
 0	 0
 Aspect / Subtitle	 Zoom / Size
 Aspect / Subtitle	 Subtitle / EQ
 PIP / Recall	 Fav / Marker / PC
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer

Original	Replacement
 i	 Info / Angle
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Z / Return	 Back / Return
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 TXT / Menu	 Menu / Home
 TXT / Menu	 Text / Goto
 Down / P-	 Down
 Down / P-	 CH- / Page-
 TV-G / Top	 D.Menu / Top
 Red / Rec	 Rec / Rec Mode
 Red / Rec	 Red / Netflix / Search
 Green / Play	 Play / Slow





Original	Replacement	Original	Replacement
 Green / Play	 Green / APP / Repeat		
 Yellow / Pause	 Yellow / YouTube / Repeat		
 Yellow / Pause	 Pause / Step / Freeze		
 Blue / Stop	 Blue / Prime Video / Random		
 Blue / Stop	 Stop / Hold		
 Scan / I<	 I<< / Preset-		
 PAT / >I	 >>I / Preset+		
 S / <<	 << / Tune-		
 P / >>	 >> / Tune+		

