



Original	Replacement
 Mute	 Mute / Dimmer
 ATV/DTV	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Vol+	 Vol+
 Guide	 Guide / EPG / -/-
 0	 0

Original	Replacement
 Sleep	 Sleep / Timer
 Vol-	 Vol-
 Text	 Text / Goto
 Text Subpage	 Setup / OPT /
 CH. List	 Smart / List
 Subtitle	 Subtitle / EQ
 I-II	 Audio / Lang I/II
 P.Size	 Zoom / Size
 P.Mode	 Picture / Format
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down





Original	Replacement	Original	Replacement
 Source	 AV / Input / RDS		
 Text Index	 Shift + Text /		
 Text Reveal	 D.Menu / Top		
 Text Size	 Shift + Zoom /		
 Text Hold	 Pause / Step / Freeze		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Replacement	Original	Replacement

