




 
 










 

 
 

 
 


 
 

 

 


 








 



 




 




 
 

 
 
 

 

 

 
 




 


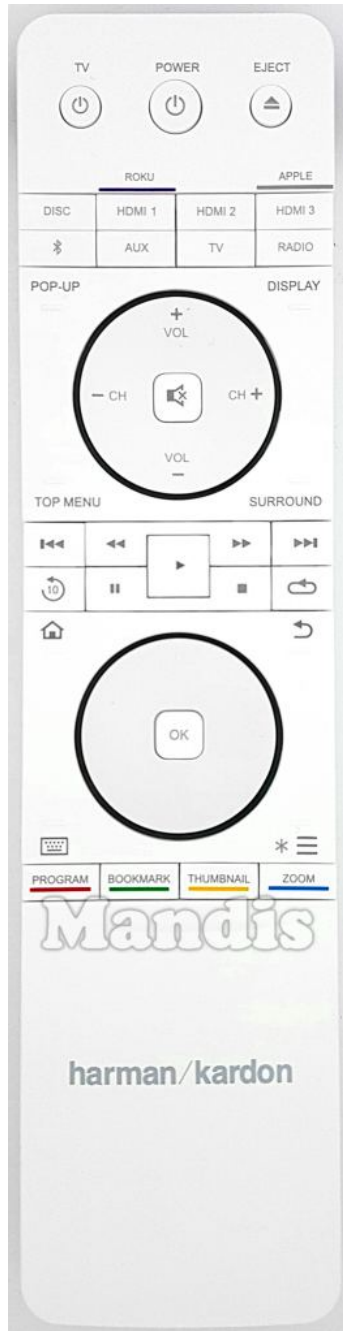


 
















 
 


 


 


Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Pop Up		D. Menu		Right		Right
	Vol+		Vol +		Left		Left
	Vol-		Vol -		OK		Ok
	Mute		Mute		[:::]		Guide
	CH+		Ch +		Red/Program		Red
	CH-		Ch -		Green/Bookmar		Green
	Top Menu		Menu		Yellow/Thumbnail		Yellow
	I<<		I<<		Blue/Zoom		Blue
	>>I		>>I				
	<<		<<				
	>>		>>				
	Stop		Stop				
	Play		Play				
	Pause		Pause				
	Back		Back				
	Up		Up				

 




Original	Replacement
 Power	 Power
 Eject	 Eject
 Disc	 1
 HDMI1/Roku	 2
 HDMI2	 3
 HDMI3/Aple	 4
 Bluetooth	 5
 AUX	 6
 TV	 7
 Radio	 TV/R
 Pop Up	 D. Menu
 Display	 Info
 Top Menu	 Menu
 Surround	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

 
Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Recall	 Pre Ch
 (10)	 Media
 [:::]	 Guide
 Home	 Smart
 *≡	 Options
 Back	 Back
 Up	 Up
 Down	 Down

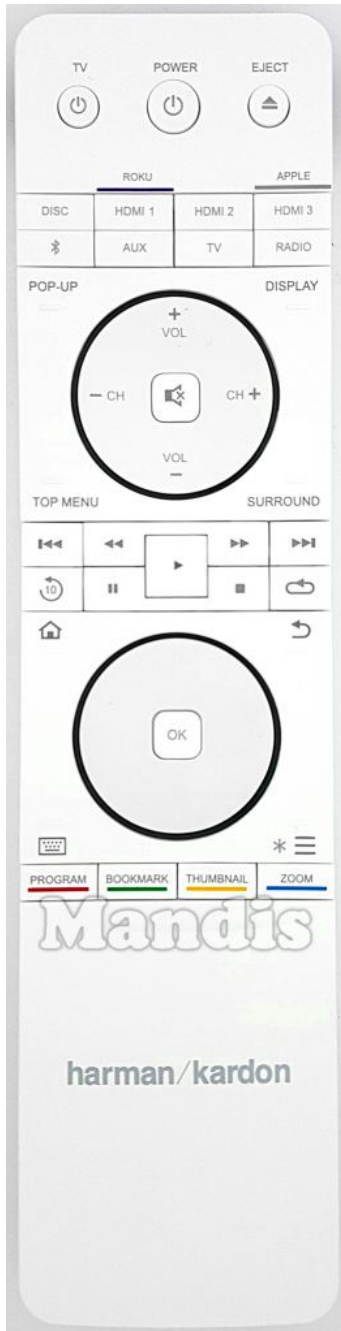


 






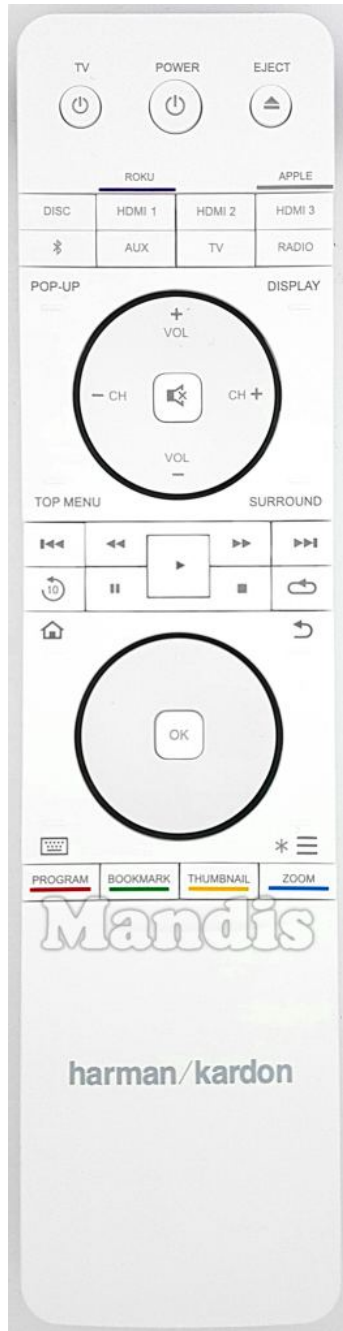


















 




 
Original		Replacement		Original		Replacement	
	Right		Right				
	Left		Left				
	OK		Ok				
	Red/program		Red				
	Green/Bookmar		Green				
	Yellow/Thumbnail		Yellow				
	Blue/Zoom		Blue				







	Original	Replacement	Original	Replacement
	Power			
	Pop Up			
	Play			
	>>			
	<<			
	Pause			
	Stop			
	OK			
	Up			
	Down			
	Right			
	Left			
	Vol+			
	Vol-			
	Mute			

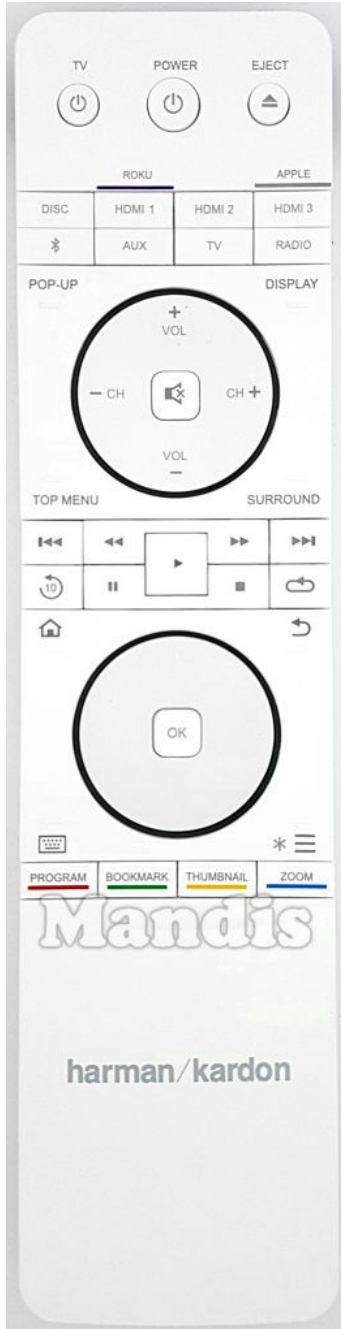



Original	Replacement
 Power Tv	 Power
 Eject	 Eject
 Pop Up	 D. Menu
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Recall	 Back
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Red/Program	 Red
 Green/Bookmar	 Green
 Yellow/Thumbnail	 Yellow
 Blue/Zoom	 Blue
 CH+	 Ch +

Original	Replacement
 CH-	 Ch -

