



Original		Replacement		Original		Replacement	
	AVR Power On		Power		3		3
	AVR Power Off		Shift + Power		4		4
	Cable/Sat		Shift + 0		5		5
	Disc		Shift + 2		6		6
	DVR		Shift + 3		7		7
	Radio		Shift + 6		8		8
	Tv		Shift + 1		9		9
	USB		Shift + 8		Last		Back / Return
	Game		Shift + 4		0		0
	Media Server		Shift + 9		Back/Exit		Exit / Cancel / Clear
	Network		Shift + 5		Up		Up
	AUX		Shift + 7		Menu		Menu / Home
	Audio Effects		Audio / Lang I/II		Left		Left
	Video Modes		Picture / Format		OK		OK
	Surround Modes		Eject / Surround		Right		Right
	1		1		Down		Down
	2		2		Red		Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green / APP / Repeat		Sleep / Timer
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Vol+		
	Mute / Dimmer		
	CH+ / Page+		
	Vol-		
	CH- / Page-		
	I<< / Preset-		
	Pause / Step / Freeze		
	>>I / Preset+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Stop / Hold		
	Smart / List		
	Info / Angle		





Original	Replacement
Disc Power On	Power
Disc Power Off	Shift + Power
Disc	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Last	Back / Return
0	0
Back/Exit	Exit / Cancel / Clear
Up	Up
Menu	Menu / Home

Original	Replacement
Left	Left
OK	OK
Right	Right
Down	Down
Disc Menu	D.Menu / Top
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Mute	Mute / Dimmer
Vol-	Vol-
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow





Original	Replacement	Original	Replacement
	>> / Tune+		
	Rec / Rec Mode		
	Stop / Hold		





Original		Replacement		Original		Replacement	
	DVR Power On		Power		Vol+		Vol+
	DVR		Display / Media		Mute		Mute / Dimmer
	1		1		CH/Page Up		CH+ / Page+
	2		2		Vol-		Vol-
	3		3		CH/Page Down		CH- / Page-
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Menu		Menu / Home				
	Left		Left				
	Right		Right				
	Down		Down				





Original		Replacement		Original		Replacement	
	AVR Power On		Power		3		3
	AVR Power Off		Shift + Power		4		4
	Cable/SAT		Shift + 0		5		5
	Disc		Shift + 2		6		6
	DVR		Shift + 3		7		7
	Radio		Shift + 6		8		8
	TV		Shift + 1		9		9
	USB		Shift + 8		Last		Back / Return
	Game		Shift + 4		0		0
	Media Server		Shift + 9		Back/Exit		Exit / Cancel / Clear
	Network		Shift + 5		Up		Up
	AUX		Shift + 7		Menu		Menu / Home
	Audio Effects		Audio / Lang I/II		Left		Left
	Video Modes		Picture / Format		OK		OK
	Surround Modes		Eject / Surround		Right		Right
	1		1		Down		Down
	2		2		Red		Red / Netflix / Search





	Original		Replacement		Original		Replacement
	Green		Green / APP / Repeat		Info		Info / Angle
	Yellow		Yellow / YouTube / Repeat		Sleep		Sleep / Timer
	Blue		Blue / Prime Video / Random				
	Vol+		Vol+				
	Mute		Mute / Dimmer				
	CH/Page Up		CH+ / Page+				
	Vol-		Vol-				
	CH/Page Down		CH- / Page-				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	AVR		Smart / List				

