 

 



 



 

 

 





 

 

 



 

 









 



 



 

 



 





 

 






 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 OK	 OK
 3	 3	 Menu	 Menu / Home
 4	 4	 Back	 Back / Return
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Q.Menu	 D.Menu / Top
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 [TV]	 TV/Radio /	 i	 Info / Angle
 Internet	 Smart / List	 EPG	 Guide / EPG / -/-
 Fav / Marker / PC	 Fav / Marker / PC	 TXT	 Text / Goto
 Mute / Dimmer	 Mute / Dimmer	 Lang.	 Audio / Lang I/II
 Vol+	 Vol+	 Subt.	 Subtitle / EQ

Original	Replacement	Original	Replacement
 DIMMER MUTE	 DIMMER MUTE	 Vol-	 Vol-
 DVD	 AUX	 P+	 CH+ / Page+
 STEP-FREEZE	 REC MODE	 P-	 CH- / Page-
 Play	 Pause	 OK	 OK
 TUNE+	 PRESET+	 Menu	 Menu / Home
 LANG I/II	 SURROUND	 Back	 Back / Return
 AUDIO	 PROGRAM	 Exit	 Exit / Cancel / Clear
 SIZE	 TV RADIO	 Q.Menu	 D.Menu / Top
 ZOOM	 RDS	 Up	 Up
 OPT-TOOLS	 AV INPUT	 Down	 Down
 SETUP	 AV INPUT	 Right	 Right
 ANGLE	 INFO	 Left	 Left
 OK	 BACK	 i	 Info / Angle
 EXIT	 BACK	 EPG	 Guide / EPG / -/-
 LIST	 SMART	 TXT	 Text / Goto
 MEDIA	 DISPLAY	 Lang.	 Audio / Lang I/II
 DVD	 CD - STB	 Subt.	 Subtitle / EQ
 TAPE	 TUNER		
 USB	 BLUETOOTH		
 HDMI - BAT	 FAV MARKER		
 APP	 YouTube		
 REPEAT	 REPEAT A-B		
			





Original	Replacement	Original	Replacement
	Red		Red / Netflix / Search
	[>]		Picture / Format
	[+]		Zoom / Size
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	*1/O		Shift + 1
	*2/Q		Shift + 2
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold

