



 



 



 
 


 



 



 







 

 

 

 

 

 

 



 



 

 

 

 

 











| Original | Replacement | Original | Replacement |
|--|--|--|---|
|  Power |  Power |  Vol- |  Vol- |
|  Source |  AV / Input / RDS |  Vol+ |  Vol+ |
|  P.Mode |  Setup / OPT / |  Mute |  Mute / Dimmer |
|  S.Mode |  Sound / Title |  P+ |  CH+ / Page+ |
|  Home |  Shift + Menu / |  I/II/Audio |  Audio / Lang I/II |
|  1 |  1 |  P- |  CH- / Page- |
|  2 |  2 |  Subtitle |  Subtitle / EQ |
|  3 |  3 |  3D World |  Display / Media |
|  4 |  4 |  Info |  Info / Angle |
|  5 |  5 |  FAV |  Fav / Marker / PC |
|  6 |  6 |  Screen |  Picture / Format |
|  7 |  7 |  CH List |  Smart / List |
|  8 |  8 |  Menu |  Menu / Home |
|  9 |  9 |  Up |  Up |
|  Q.View |  D.Menu / Top |  Guide |  Guide / EPG / -/- |
|  0 |  0 |  Left |  Left |
|  Sleep |  Sleep / Timer |  OK |  OK |





| Original | Replacement |
|---|---|
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red |  Red / Netflix / Search |
|  << |  << / Tune- |
|  Green |  Green / APP / Repeat |
|  >> |  >> / Tune+ |
|  Yellow |  Yellow / YouTube / Repeat |
|  I<< |  I<< / Preset- |
|  Blue |  Blue / Prime Video / Random |
|  >>I |  >>I / Preset+ |
|  Text |  Text / Goto |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

