



Original	Replacement
	
Power	Power
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
Lang	Audio / Lang I/II
	
0	0
	
TXT	Text / Goto
	
V+	Vol+
	
Mute	Mute / Dimmer
	
P+	CH+ / Page+
	
V-	Vol-

Original	Replacement
	
Input	AV / Input / RDS
	
P-	CH- / Page-
	
Home	Menu / Home
	
Guide	Guide / EPG / -/--
	
Info	Info / Angle
	
Up	Up
	
Left	Left
	
OK	OK
	
Right	Right
	
Back	Back / Return
	
Down	Down
	
Exit	Exit / Cancel / Clear
	
Netflix	Shift + Red / Netflix /
	
YouTube	Shift + Yellow / YouTube /
	
Prime Video	Shift + Blue / Prime
	
Twitch	Shift + Green / APP /
	
Fav1	Smart / List





Original	Replacement
 Fav2	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement

