




 

 


 

 


















Original	Replacement	Original	Replacement
	Power		Blue
	Input		Blue
	1		Menu
	2		Play
	3		Pause
	4		Back
	5		Exit
	6		Up
	7		Down
	8		Right
	9		Left
	0		Ok
	Guide		Vol +
	CH List		Vol -
	Red		Mute
	Green		Smart
	Yellow		Ch +
			Ch -



