






 

 






 
 

 





 

 

 








Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide
 CH.List	 List
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue
 [=]	 Menu
 TXT	 Text
 Back	 Back
 Exit	 Exit
 Home	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 <<	 <<





Original	Replacement	Original	Replacement
 Play	 Play		
 >>	 >>		
 Pause	 Pause		
 Subtitle	 Subt		
 Stop	 Stop		
 Netflix	 Pre Ch		
 prime video	 TV/R		
 YouTube	 Format		
 Rakuten Tv	 3D		
 Media	 Media		
 FreeviewPlay	 Dual		

