



Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute	 -/--	 Guide
 Up	 Up	 -/--/EXIT	 Exit
 Down	 Down	 P<P/SWAP	 Pre Ch
 Right	 Right	 Vol+	 Vol +
 Left	 Left	 Vol-	 Vol -
 OK/Select	 Ok	 P+	 Ch +
 M	 Menu	 P-	 Ch -
 1	 1	 PP	 Eject
 2	 2	 I-II	 Dual
 3	 3	 Tv/DTV	 TV/R
 4	 4	 [≡]	 Text
 5	 5	 [≡0]	 Options
 6	 6	 AV/Source	 AV
 7	 7	 [≡+]/[X]	 Format
 8	 8	 [≡X]/[■ ■]	 3D
 9	 9	 [≡.]/[■ ■]	 Subt





Original		Replacement	
	[≡◇]	 APP MEDIA	Media
	[≡?]	 RETURN BACK	Back
	[≡i]	 DISPLAY INFO	Info
	Red/[+]/Wide/↑	 A	Red
	Green/↓	 B	Green
	Yellow	 C	Yellow
	Blue/Guide	 D	Blue
	[i]	 E-MANUAL D.MENU	D. Menu

Original	Replacement

