



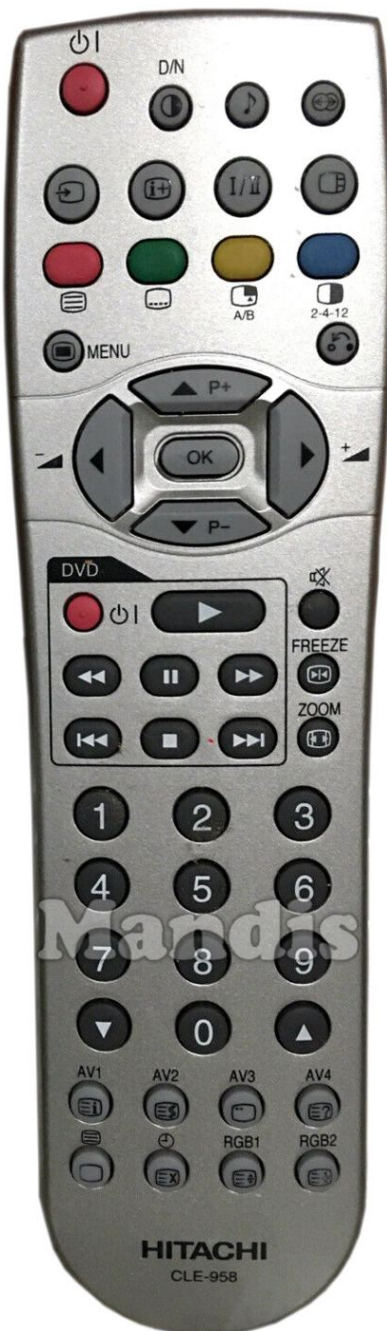

Original	Replacement
	 Power
	 D.Menu / Top
	 Sound / Title
	 Shift + Back / Return
	 AV / Input / RDS
	 Info / Angle
	 Audio / Lang I/II
	 Shift + Text / Goto
	 Red / Netflix / Search
	 Text / Goto
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Back / Return
	 CH+ / Page+
	 Up

Original	Replacement
	 Right
	 Vol+
	 Left
	 Vol-
	 OK
	 CH- / Page-
	 Down
	 Shift + Power
	 Play / Slow
	 Mute / Dimmer
	 DVD
	 Pause / Step / Freeze
	 DVD
	 Shift + Pause / Step / Freeze
	 I<< / Preset-
	 Stop / Hold
	 DVD

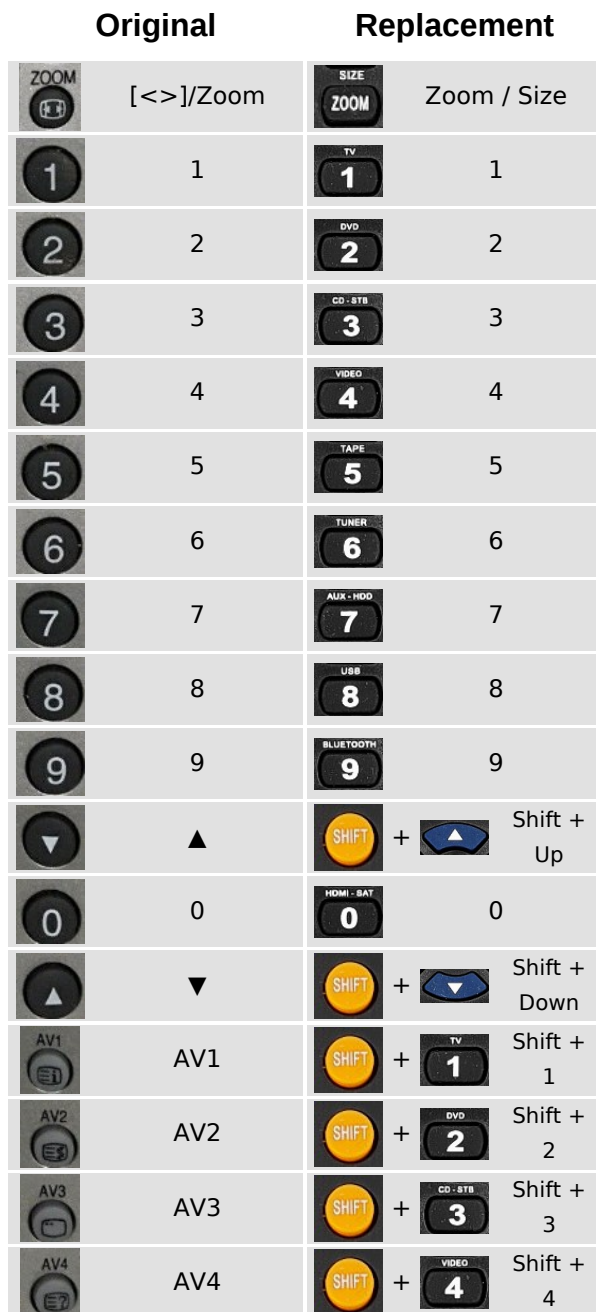

[illegible]