



 
 




 










 










Original	Replacement
 Power	 Power
 [i+]	 Info
 AV1	 AV
 AV1	 Shift + 1
 Rec/AV2	 Shift + 2
 Rec/AV2	 Rec
 Stop/AV3	 Shift + 3
 Stop/AV3	 Stop
 Play/AV4	 Shift + 4
 Play/AV4	 Play
 AV5	 Shift + 5
 AV5	 Shift + AV
 Pause/AV6	 Shift + 6
 Pause/AV6	 Pause
 <</RGB1	 Shift + 7
 <</RGB1	 <<
 >>/RGB2	 >>

Original	Replacement
 >>/RGB2	 Shift + 8
 Menu	 Menu
 [>I</Recall	 Pre Ch
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 J/S.Mode	 Shift + Dual
 (I)/P.Mode	 Shift + Format
 Vol+	 Vol +
 Vol-	 Vol -
 I/II	 Dual
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1






 























 


Original	Replacement	Original	Replacement
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
[]/2-4-12	RETURN BACK		Back
[≡]	-/-/ GUIDE		Guide
Red	A		Red
Green	B		Green
Yellow	C		Yellow
Blue	D		Blue
[≡i]	SETTINGS OPT		Options
[≡x]	SEARCH TV/R		TV/R

Original	Replacement	Original	Replacement
SLIDE SHOW	AD SUBT	AD SUBT	Subt
ROTATE	ECO 3D	ECO 3D	3D
[≡]	REPEAT TEXT	REPEAT TEXT	Text
[<>]	PICTURE FORMAT	PICTURE FORMAT	Format
SWIVEL	HOME SMART	HOME SMART	Smart
PHOTO	APP MEDIA	APP MEDIA	Media








 

 

 















 
















	Original	Replacement	Original	Replacement
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Stop			
	Play			
	Pause			
	<<			
	>>			
	P+			
	P-			





	Original	Replacement		Original	Replacement
	Power	 Power		8	 8
	OK	 Ok		9	 9
	Up	 Up		0	 0
	Down	 Down			
	Right	 Right			
	Left	 Left			
	Vol+	 Vol +			
	Vol-	 Vol -			
	P+	 Ch +			
	P-	 Ch -			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			

