















































 



 



















Original	Replacement	Original	Replacement
 Standby	 Power	 5	 5
 DVD	 Shift + 2	 6	 6
 Tuner	 Shift + 6	 Display	 Display / Media
 AUX	 Shift + 7	 7	 7
 Subtitle	 Subtitle / EQ	 8	 8
 Language	 Shift + Audio / Lang I/II	 9	 9
 Title	 Sound / Title	 NTSC/PAL	 Picture / Format
 Return	 Back / Return	 +10	 Guide / EPG / -/-
 Goto	 Text / Goto	 0	 0
 Zoom	 Zoom / Size	 Sleep	 Sleep / Timer
 Menu/PBC	 Menu / Home	 Mute	 Mute / Dimmer
 Angle	 Info / Angle	 Setup	 Setup / OPT /
 1	 1	 Open/Close	 Eject / Surround
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 Audio	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right



