



Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/Left	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/Right	 >>	 P-	 Ch -
 >◆	 D. Menu	 1	 1
 [ I ]	 Guide	 2	 2
 [ o ]/Timer	 Sleep	 3	 3
 [ ? ]	 Eject	 4	 4
 [ ◆ ]	 Format	 5	 5
 [ ≡ ]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch










 

 



 
Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual



