



Original	Replacement
Power	Power
USB	+ Shift + 8
TTX	Text / Goto
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
Fav	Fav / Marker / PC
I<<	I<< / Preset-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Red / TV/Radio	Red / Netflix / Search
Red / TV/Radio	TV/Radio /
Green / Media	Green / APP / Repeat
Green / Media	Display / Media
Yellow	Yellow / YouTube / Repeat

Original	Replacement
Blue / Timer	Blue / Prime Video / Random
Blue / Timer	Sleep / Timer
Menu	Menu / Home
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right
EPG	Guide / EPG / -/--
Down	Down
Back	Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Info	Info / Angle
CH-	CH- / Page-





	Original	Replacement	Original	Replacement
1,..@	1	TV 1		
2 abc	2	DVD 2		
3 def	3	CD - STB 3		
4 ghi	4	VIDEO 4		
5 jkl	5	TAPE 5		
6 mno	6	TUNER 6		
7 pqrs	7	AUX - HDD 7		
8 tuv	8	USB 8		
9 wxyz	9	BLUETOOTH 9		
AUDIO	Audio	LANG I/II AUDIO		
0	0	HDMI - BAT 0		
SUBTITLE	Subtitle	EQ SUBTITLE		

