 


 
 
 
 
 

 
 


 
 


 
 
 
 
 
 

 





Original	Replacement	Original	Replacement
Standby	Power	>>I / Subpage	>>I
Source	AV	Menu	Menu
Red	Red	Exit	Exit
Green	Green	Up	Up
Yellow	Yellow	Down	Down
Blue	Blue	Right	Right
P Mode	Format	Left	Left
S Mode	Dual	Enter	Ok
Freeze	Smart	Play/Pause / Timeshift	Play
TXT	Text	Play/Pause / Timeshift	Pause
Mix / Fav List	Pre Ch	Stop / EPG	Stop
Size / Subtitle	Subt	Stop / EPG	Guide
Cancel / Audio	Shift + Dual	Vol +	Vol +
Record	Rec	Vol -	Vol -
<< / Index	<<	Mute	Mute
>> / Hold	>>	TV / Radio	TV/R
I<< / Reveal	I<<	CH +	Ch +





Original		Replacement		Original	Replacement
	CH -		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Display		Info		
	Recall		Back		

