



 










 
 















 







 

 



 





 

 

 

 

 

 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Vol-	 Vol-
 2	 2	 Ok	 OK
 3	 3	 Right	 Right
 4	 4	 Vol+	 Vol+
 5	 5	 Media	 Display / Media
 6	 6	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 TV/Radio	 TV/Radio /
 9	 9	 Sleep/Red	 Sleep / Timer
 0	 0	 Subtitle/Green	 Subtitle / EQ
 Info	 Info / Angle	 Teletext/Yellow	 Text / Goto
 Epg	 Guide / EPG / -/-	 Audio/Blue	 Audio / Lang I/II
 Menu	 Menu / Home	 <<	 << / Tune-
 CH+	 CH+ / Page+	 Play	 Play / Slow
 Up	 Up	 Pause	 Pause / Step / Freeze





Original	Replacement
	 >> / Tune+
	 Prev / Preset-
	 Rec / Rec Mode
	 Fav / Marker / PC
	 Stop / Hold

Original	Replacement

