





Original	Replacement		
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / Radio		TV/Radio /
	0		0
	←PR		Back / Return
	EPG		Guide / EPG / -/--
	Up / PR+		CH+ / Page+
	Up / PR+		Up

Original	Replacement		
	Menu		Menu / Home
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK / List		OK
	OK / List		Smart / List
	Right / Vol+		Vol+
	Right / Vol+		Right
	FAV		Fav / Marker / PC
	Down / PR-		CH- / Page-
	Down / PR-		Down
	Exit		Exit / Cancel / Clear
	Red / Find		Red / Netflix / Search
	↑		>> / Preset+
	↑		>> / Tune+
	Green / Zoom		Zoom / Size
	Green / Zoom		Green / APP / Repeat
	↓		<< / Tune-





Original		Replacement		Original		Replacement	
	↓		I<< / Preset-				
	Blue / LR		Blue / Prime Video / Random				
	Blue / LR		Audio / Lang I/II				
	Yellow / TXT		Text / Goto				
	Yellow / TXT		Yellow / YouTube / Repeat				
	Pause		Pause / Step / Freeze				
	SAT		Shift + 0				
	SAT		Display / Media				
	TV / AV		AV / Input / RDS				
	Sleep		Sleep / Timer				
	[::]		Picture / Format				
	Info		Info / Angle				

