



























 

 











































 









 

 




 
 


| Original  | Replacement | Original  | Replacement              |
|---|-------------|---|--------------------------|
|      | Power       |      | Power                    |
|      | Mute        |      | Mute / Dimmer            |
|      | Picture     |      | Picture / Format         |
|      | Aspect      |      | Shift + Picture / Format |
|      | Sleep       |      | Sleep / Timer            |
|      | Sound       |      | Sound / Title            |
|      | 1           |      | 1                        |
|      | 2           |      | 2                        |
|      | 3           |      | 3                        |
|     | 4           |     | 4                        |
|    | 5           |    | 5                        |
|    | 6           |    | 6                        |
|    | 7           |    | 7                        |
|    | 8           |    | 8                        |
|    | 9           |    | 9                        |
|    | FAV         |    | Fav / Marker / PC        |
|    | 0           |    | 0                        |
|    | Recall      |    | Back / Return            |
|    | Display     |    | Display / Media          |
|    | Up          |    | Up                       |
|    | Input       |    | AV / Input / RDS         |
|    | Left        |    | Left                     |
|    | OK          |    | OK                       |
|    | Right       |    | Right                    |
|    | Menu        |    | Menu / Home              |
|    | Down        |    | Down                     |
|   | Exit        |   | Exit / Cancel / Clear    |
|  | Vol +       |  | Vol+                     |
|  | TV / Radio  |  | TV/Radio /               |
|  | EPG         |  | Guide / EPG / -/-        |
|  | CH +        |  | CH+ / Page+              |
|  | Vol -       |  | Vol-                     |
|  | Eject       |  | Eject / Surround         |
|  | CH -        |  | CH- / Page-              |





| Original  | Replacement   |
|---|---|
|  Subtitle            |  Subtitle / EQ                 |
|  CH List             |  Smart / List                  |
|  Rec                 |  Rec / Rec Mode                |
|  Rec List            |  Shift + Smart / List          |
|  TV/TXT / D.Pro      |  Shift + TV/Radio / Program    |
|  TV/TXT / D.Pro      |  Text / Goto                   |
|  Cancel / D.Rep      |  Shift + Exit / Cancel / Clear |
|  Cancel / D.Rep      |  Shift + Green / APP /         |
|  Reveal / D.Goto     |  Shift + Text /                |
|  Nicam/A2 /         |  Shift + Play /               |
|  Nicam/A2 /        |  Shift + Audio / Lang I/II   |
|  Index / I<<       |  I<< / Preset-               |
|  Hold / >>I        |  >>I / Preset+               |
|  Hold / >>I        |  Shift + Stop /              |
|  Size / D.Zoom     |  Zoom / Size                 |
|  Subpage / D.Title |  Shift + Sound / Title       |
|  <<                |  << / Tune-                  |

| Original   | Replacement   |
|--|---|
|  >>               |  >> / Tune+                    |
|  Play / Pause     |  Play / Slow                   |
|  Play / Pause     |  Pause / Step / Freeze         |
|  Stop             |  Stop / Hold                   |
|  Red / D.Set      |  Shift + OK                    |
|  Red / D.Set      |  Red / Netflix / Search        |
|  Green / D.Menu   |  D.Menu / Top                  |
|  Green / D.Menu   |  Green / APP / Repeat          |
|  Yellow / D.Sub.  |  Yellow / YouTube / Repeat     |
|  Yellow / D.Sub. |  Shift + Subtitle / EQ        |
|  Blue / D.Lan   |  Blue / Prime Video / Random |
|  Blue / D.Lan   |  Audio / Lang I/II           |

