



Original	Replacement	Original	Replacement
 Power	 Power	 Yellow/Repeat	 Yellow
 I<<	 I<<	 Blue/A-B	 Blue
 Open/Close	 Eject	 CH+	 Ch +
 <<	 <<	 CH-	 Ch -
 >>	 >>	 Tv-Menu	 Menu
 >>	 >>	 TV/AV	 AV
 Play/Pause	 Play	 Vol+	 Vol +
 TV/TXT/Langua	 Text	 Vol-	 Vol -
 Cancel/Zoom	 Shift + Eject	 DTV	 Smart
 Reveal/Subtitle	 Subt	 DVD Setup	 Shift + Menu
 Stop	 Stop	 Exit	 Exit
 Hold/Menu	 D. Menu	 Display	 Shift + Info
 Size/Angle	 Format	 Up	 Up
 Subpage/Title	 Options	 Down	 Down
 Index/Goto	 Media	 Right	 Right
 Red/Program	 Red	 Left	 Left
 Green/Slow	 Green	 OK	 Ok





Original	Replacement	Original	Replacement
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
-/--	-/--	SHIFT + -/--	SHIFT + Guide
Recall	Recall	FAV PRE-CH	Pre Ch
Picture	Picture	SHIFT + PICTURE FORMAT	SHIFT + Format
Sound	Sound	SHIFT + SOUND DUAL	SHIFT + Dual
Nicam/A2	Nicam/A2	SOUND DUAL	Dual
Mute	Mute	MUTE	Mute
Sleep	Sleep	PROG SLEEP	Sleep

Original	Replacement	Original	Replacement
INFO	Info	DISPLAY INFO	Info
SUBTITLE	Subtitle	SHIFT + AD SUBT	Shift + Subt
CHANNEL LIST	Channel List	DISC NAV LIST	List
EPG	EPG	-/-- GUIDE	Guide
TV/RADIO	Tv/Radio	SEARCH TVR	TV/R
FAV	FAV	SHIFT + FAV PRE-CH	Shift + Pre Ch
ASPECT	Aspect	ECO 3D	3D

