




 

 








 






 

 

 

 

 








Original	Replacement	Original	Replacement
	Power		Power
	TV/SAT		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	SAT		Smart
	FAV	 + 	Shift + Pre Ch
	Menu		Menu
	EPG		Guide

Original	Replacement	Original	Replacement
	Recall		Pre Ch
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	CH/Page+		Ch +
	CH/Page-		Ch -
	Red		Red
	TTX		Text
	Green		Green
	SUB. T		Subt
	Yellow		Yellow
	Zoom		Eject





Original		Replacement		Original	Replacement
	Blue		Blue		
	MP		3D		
	Tv/Radio		TV/R		
	Audio		Dual		
	Pause		Pause		
	Rec		Rec		
	Info		Info		
	P/N	+	Shift + Media		
	POS		Media		
	T/S		Options		
	<<		<<		
	>>		>>		
	Play		Play		
	Stop		Stop		

