





 

 







































 















 


 
 


 













Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio I/II	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Auto	 Smart / List
 Display	 Display / Media
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





 





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Repeat	 Shift + Green / APP /
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Size	 Zoom / Size
 << / Reveal	 << / Tune-
 >> / Subpage	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Timeshift	 D.Menu / Top

Original	Replacement
 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /





Original	Replacement	Original	Replacement
 Standby	 Power	 Recall	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 P.Mode	 Picture / Format	 Display	 Display / Media
 S.Mode	 Sound / Title	 Up	 Up
 Audio I/II	 Audio / Lang I/II	 Left	 Left
 Sleep	 Sleep / Timer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Vol-	 Vol-
 4	 4	 Vol+	 Vol+
 5	 5	 CH-	 CH- / Page-
 6	 6	 CH+	 CH+ / Page+
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random





Original	Replacement	Original	Replacement
TEXT	Text	GOTO TEXT	Text / Goto
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
INDEX	Index	ANGLE INFO	Info / Angle
SIZE	Size	SIZE ZOOM	Zoom / Size
REVEAL	<<	TUNE- ◀	<< / Tune-
SUBPAGE	>>	TUNE+ ▶	>> / Tune+
◀ ▶	Play/Pause	SLOW ▶	Play / Slow
◀ ▶	Play/Pause	STEP-FREEZE 	Pause / Step / Freeze
■	Stop	HOLD ■	Stop / Hold
◀◀	I<<	PRESET- ◀◀	I<< / Preset-
▶▶	>>I	PRESET+ ▶▶	>>I / Preset+
REC	Rec	REC MODE ●	Rec / Rec Mode
TIME SHIFT	Timeshift	LIST SMART	Smart / List
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
TV/RADIO	Tv/Radio	PROGRAM TV/RADIO	TV/Radio /

Original	Replacement	Original	Replacement

