



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original	Replacement	Original	Replacement
	CH+		Yellow/Root
	Info		Blue/Title
	Vol+		
	CH-		
	Mute		
	Vol-		
	Rec		
	Pause		
	I<<		
	>>I		
	<<		
	Play		
	Stop		
	>>		
	Red/↑/Zoom		
	Red/↑/Zoom		
	Green/↓/Repeat		
			CH+ / Page+
			Info / Angle
			Vol+
			CH- / Page-
			Mute / Dimmer
			Vol-
			Rec / Rec Mode
			Pause / Step / Freeze
			I<< / Preset-
			>>I / Preset+
			<< / Tune-
			Play / Slow
			Stop / Hold
			>> / Tune+
			Red / Netflix / Search
			Zoom / Size
			Green / APP / Repeat
			Yellow / YouTube / Repeat
			Blue / Prime Video / Random

