




 

 
 
 
 
 
 
 



 












 
 



 

 

 



 
 


 

 

 

 

 
 





 









| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  Standby/On |  Power |  Menu/Bluetooth Setting |  Menu |
|  1 |  1 |  Gt.AMP Mode |  D. Menu |
|  2 |  2 |  Cancel |  Exit |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Down |  Down |
|  5 |  5 |  >>/>> |  >> |
|  6 |  6 |  <</<< |  << |
|  7 |  7 |  SET |  Ok |
|  8 |  8 |  Tuner |  TV/R |
|  9 |  9 |  Audio In |  3D |
|  10 |  0 |  Play/Pause |  Red |
|  +10 |  GUIDE |  Play/Pause CD |  Play |
|  +100 |  PRE-CH |  Play/Pause iPod |  Green |
|  Display |  INFO |  Play/Pause Bluetooth |  Pause |
|  Sleep |  Sleep |  Play/Pause Metronome |  Yellow |
|  A.P.S. |  MEDIA |  Stop |  Stop |
|  Clock/Timer |  AV |  FM Mode |  Format |



