


 









Original	Replacement
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Display / Media
	 Text / Goto
	 Subtitle / EQ
	 Shift + Pause / Step / Freeze

Original	Replacement
	 Info / Angle
	 Menu / Home
	 AV / Input / RDS
	 Guide / EPG / -/-
	 Exit / Cancel / Clear
	 Up
	 Down
	 Right
	 Left
	 OK
	 Vol+
	 Vol-
	 Fav / Marker / PC
	 Rec / Rec Mode
	 CH+ / Page+
	 CH- / Page-
	 1





Original		Replacement		Original		Replacement	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
RECALL	Recall	RETURN BACK	Back / Return				

