


 

 

 

 





 

 

 

 

 

 

 

 

 








Original	Replacement
 Power Audio	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide / EPG / -/-
 +10	 Fav / Marker / PC
 Audio Vol+	 Vol+
 Audio Vol-	 Vol-
 Fade Muting	 Mute / Dimmer

Original	Replacement
 Menu/PL	 Menu / Home
 Top Menu/PG	 D.Menu / Top
 On Screen	 Display / Media
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Back/Tuner/Play Mode	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Pause	 Red / Netflix / Search
 Play/Pause USB	 Shift + Play /
 Play/Pause	 Shift + Yellow / YouTube /
 Play/Pause Bluetooth	 Blue / Prime Video / Random
 Audio/MPX	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ





Original	Replacement
 Zoom	 Zoom / Size
 Audio In	 Shift + Display / Media
 File Type	 Text / Goto
 Repeat	 Green / APP / Repeat
 VFP/Scan Mode	 AV / Input / RDS
 3D Phonic/HP	 TV/Radio /
 C.Voice	 Shift + Setup / OPT / Tools
 DVD Audio In	 Shift + Sound / Title
 My Sound	 Picture / Format
 Sound Mode	 Sound / Title
 Subwoofer Level+	 CH+ / Page+
 V.Bass	 Shift + Audio / Lang I/II
 Subwoofer Level-	 CH- / Page-
 Repeat A-B	 Yellow / YouTube / Repeat
 Cancel	 Exit / Cancel / Clear
 Set Up	 Setup / OPT /
 Return	 Shift + Back / Return

Original	Replacement
 Angle	 Info / Angle
 Tv Vol+	 Shift + Right
 Tv Vol-	 Shift + Left
 Enter/Set	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Sleep	 Sleep / Timer
 A.STBY	 Shift + 0
 Clock/Timer	 Shift + Sleep / Timer
 MIC Vol+	 Shift + Up
 MIC Vol-	 Shift + Down
 Karaoke Setting	 Smart / List
 Mic Mix	 Shift + Smart / List
 TV Channel+	 Shift + CH+ /
 Vocal Masking	 Eject / Surround



