

 
















 





 



 



 
 
 

 
 
 

 




 





 

 
 


 



 



 





Original		Replacement		Original		Replacement	
	View DVD		Smart		Timer		Shift + AV
	View VCR		Media		F.ADV / Step		Pre Ch
	TV / VCR		TV/R		I<<		I<<
	Input SEL.		AV		Rec		Rec
	Standby / On		Power		Speed		Sleep
	Open / Close		Eject		>>I		>>I
	Info		Info		<<		<<
	1		1		Stop		Stop
	2		2		Play		Play
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		TRK +		Vol +
	6		6		TRK -		Vol -
	7		7		Audio		Dual
	8		8		Prog +		Ch +
	9		9		Prog -		Ch -
	0		0		Menu		Menu





Original		Replacement		Original		Replacement	
	Return		Back				
	Up		Up				
	Right		Right				
	Down		Down				
	Left		Left				
	OK		Ok				
	Disc Menu		D. Menu				
	Clear		Exit				
	Zoom		Shift + Eject				
	EZ View		Options				
	Subtitle		Subt				
	Angle / IPC		Format				
	Mode / Repeat		Text				
	Mark / Search		Shift + TV/R				

