








Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 PP	 Back / Return
 I / II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Fav / Marker / PC
 P<P	 Display / Media
 Menu	 Menu / Home

Original	Replacement
 Info	 Info / Angle
 Left	 Left
 Up / P +	 Up
 Up / P +	 CH+ / Page+
 Right	 Right
 Down / P -	 Down
 Down / P -	 CH- / Page-
 Vol -	 Vol-
 Vol +	 Vol+
 Red / Sound	 Red / Netflix / Search
 Green / Picture	 Green / APP / Repeat
 Yellow / Feature	 Yellow / YouTube / Repeat
 Blue / Install	 Blue / Prime Video / Random
 TV	 TV/Radio /
 AV	 AV / Input / RDS
 Text	 Text / Goto
 Mix	 Shift + Goto Text / Goto





Original		Replacement		Original		Replacement	
	Subcode		Sleep / Timer				
	Hold		Stop / Hold				
	Cancel		Exit / Cancel / Clear				
	Size		Zoom / Size				
	Reveal		Picture / Format				
	Index		OK				

